Руководство по функционалу моделей TELECRANE:

Product Guidance														
S= Single speed pushbutton D= Double speed pushbutton														
Model	No. of Pushbutton (1-Speed)	No. of Pushbutton (2-Speed)	No. of Relay Contact	EMS Button	Rotary Key	Receiver Horn	Receiver F-Type Antenna	Transmitter AA Battery Use	Computer Reader-Port	e-Card	Receiver Power Indicate Light	Receiver Cable Pre- Assembly	Receiver Transformer Supply	Receiver Switching Power Supply
F21-2S	2		4	•				2	•			•	•	
F21-2S(S)	2		4	•				2	•			•	•	
F21-2D		2	6	•				2	•			•	•	
F21-4S	4		6	•	•			2	•			•	•	
F21-4D		4	8	•	•			2	•			•	•	
F21-E1	6		8	•	•			2	•			•	•	
F21-4SB	4		6	•				2	•			•	•	
F21-E1B	6		8	•				2	•			•	•	
F21-E2	8		10	•	•			2		•		•	•	
F21-E2-4	2	2	6	•	•			2		•		•	•	
F21-E3M	6		8	•	•			2		•		•		•
F21-E3S	6		8	•	•			2		•		•		•
F21-E3B	6		8	•				2		•		•		•
F21-E3M-4D		4	8	•	•			2		•		•		•
F24-6S	6		8	•	•		•	4	•		•	•	•	
F24-6D		6	12	•	•		•	4	•		•	•	•	
F24-8S	8		10	•	•		•	4	•		•	•	•	
F24-8D		8	15	•	•		•	4	•		•	•	•	
F24-10S	10		12	•	•		•	4	•		•	•	•	
F24-10D		10	18	•	•		•	4	•		•	•	•	
F24-12S	12		13	•	•		•	4	•		•	•	•	
F24-12D		11	20	•	•		•	4	•		•	•	•	
F25-6S	6		8	•	•	•	•	4	•		•	•	•	
F25-6D		6	12	•	•	•	•	4	•		•	•	•	
F25-8S	8		10	•	•	•	•	4	•		•	•	•	
F25-8D		8	15	•	•	•	•	4	•		•	•	•	
F25-10S	10		12	•	•	•	•	4	•		•	•	•	
F25-10D		10	18	•	•	•	•	4	•		•	•	•	
F24-60N	6		41	•	•	•	•	4	•		•	•	•	
*Transfomer po	wer supply avail	able AC 24/42/	48/110/220	/380V ±20	%									
*Switching powe	er supply availab	ole AC/DC 10 [~] 6	2V & AC/D0	C 30~456V									V 1	.0